

INSTRUCTION MANUAL

FREE PRODUCT REGISTRATION

Protect your investment and take advantage of this free product warranty.

YOU MUST REGISTER WITHIN 30 DAYS


of purchase to receive full warranty coverage and access to special offers.

www.AccessoryPower.com/warranty

Thank you for purchasing the **ReVIVE Series enerG4** Case for iPhone® 4. This slim, stylish and fully enclosed case provides durable protection from bumps and drops. The high-capacity li-polymer battery doubles the life of your iPhone 4, providing you hours of extended use for music, video, web browsing and calls. The enerG4 is the perfect combination of power and protection.


What's in the box?

- a - enerG4 battery case
- b - Micro USB cable
- c - Screen protector
- d - Screen cleaning pad

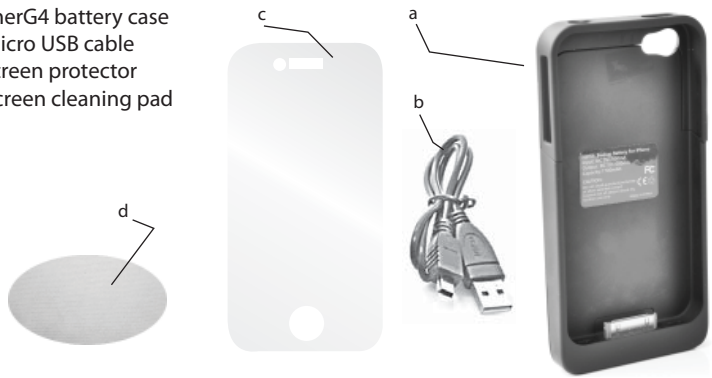

Product Diagram

- 1- Slide top cover
- 2- Power/Status button
- 3- Status LED lights
- 4- Micro USB port
- 5- 30 pin connector

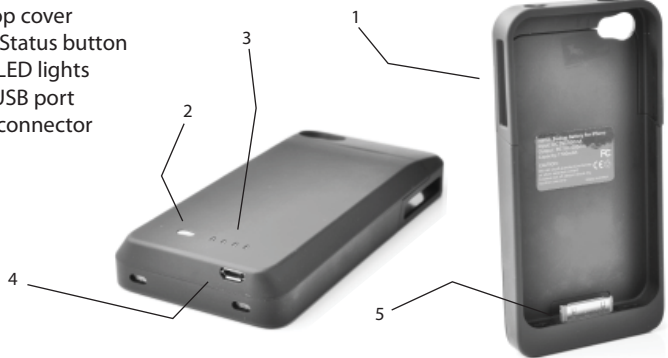

Operating Instructions:

Turning the case on/off and checking the battery level

To turn the (a) *enerG4 battery case* on or off, press and hold the (2) *Power/Status button* for 3 seconds. To check the battery's power level press the (2) *Power/Status button* briefly. The (3) *Status LED lights* will illuminate according to the chart to the right.

Battery indication LED	Battery Power
1 LED (flickering)	<20%
1 LED	20-40%
2 LED	40-60%
3 LED	60-80%
4 LED	80-100%

Charging the enerG4

First, connect the (b) *Micro USB cable* to the (4) *Micro USB port* on the bottom of the case. Then connect the (b) *Micro USB cable* to your original Apple iPhone USB wall charger or your computer's USB port. The (3) *Status LED lights* will illuminate to indicate the power level of the battery.

Applying the (c) Screen protector

First, make sure your phone's screen is clean and free of debris by cleaning it with the (d) *Screen cleaning pad*. Then, peel off the backing of the (c) *Screen protector* and align the cutouts with the speaker and button on the front of your iPhone 4. Gently apply the (c) *Screen protector* to your screen.

Inserting iPhone 4 into the enerG4

To insert or remove your phone from the case, first remove the (1) *Slide top cover* by gently applying pressure away from the body of the case. Slide your iPhone 4 into the case with screen facing outward and properly in line with the (5) *30 pin connector*. Finally place the (1) *Slide top cover* back onto the case for a secure fit.

Troubleshooting

The case is not charging. The (3) Status LED lights do not illuminate blue.
Make sure to charge the battery case by connecting the (b) *Micro USB cable* to an operational AC outlet or powered USB port.

The iPhone is not charging.

Make sure the enerG4 case is fully charged and powered on. Turn on the (a) *enerG4 battery case* by holding the (2) *Power/Status button* for 3 seconds. If the iPhone 4 is still not charging, make sure that the (5) *30 pin connector* is in line with your iPhone 4 and is fully inserted.

The (1) Slide top cover doesn't fit.

Make sure that your iPhone 4 screen is facing outward and that the (5) *30 pin connector* is properly in line with your iPhone 4 and is fully inserted. Gently pinch the sides of the (1) *Slide top cover* and apply gentle pressure until you hear it click into place.

Cautions

- Please only use this product in the manner described in this manual
- Do not expose the product to water

Product Specifications

Output: DC 5v

Input: DC5V \pm 5%, 1.5A

Cell Type: Li-polymer battery

Working voltage: DC 5v 500mA

Capacity: 1700mAh

Dimensions: 5 x 2.44 x .69 inches (12.8x 6.2 x 1.76 cm)

Weight: 2.29 oz (65gm)



ACCESSORY POWER
WESTLAKE VILLAGE, CALIFORNIA

WWW.ACCESSORYPOWER.COM
MADE IN CHINA

© 2011 ACCESSORY POWER.

ALL TRADEMARKS AND BRAND NAMES ARE THE PROPERTY OF THEIR OWNERS.

"Made for iPhone" means that an electronic accessory has been designed to connect specifically to iPhone 4 and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone 4 may affect wireless performance.



Please Always Recycle